


NOSIČ FORCE 26"-29" ZADNÍ S Klapákem AL, ČERNÝ CARRIER FORCE 26"-29" REAR WITH SPRING AL, BLACK

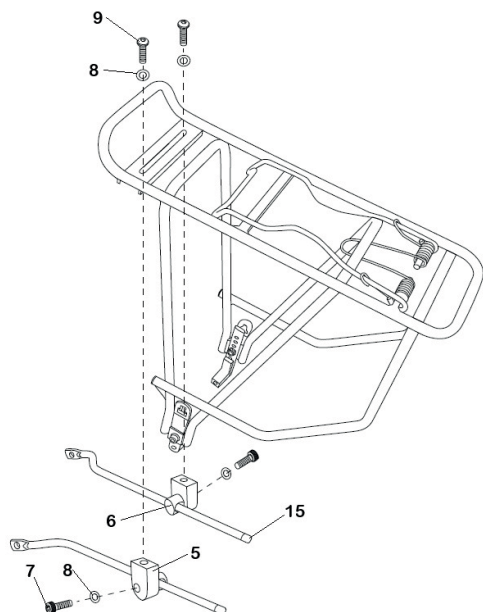

SEZNAM DÍLŮ

- 1/ nosič
- 2/ horizontální vzpěra
- 3/ držák nastavení výšky
- 4/ upínací oko
- 5/ držák upínky
- 6/ upínka
- 7/ šroub M6 x 12 - 2 ks
- 8/ podložka M6 - 4 ks
- 9/ šroub II M6 x 12 - 2 ks
- 10/ šroub M5 x 12 - 2 ks
- 11/ podložka M5 - 4 x
- 12/ šroub M6 x 16 - 2 ks
- 13/ matice M6 - 2 ks
- 14/ šroub M5 x 40 - 2 ks
- 15/ plastová koncovka - 2 ks


KROK 1. SESTAVENÍ UPÍNACÍ SADY

1. Do upínky(6) zasuněte horizontální vzpěru(2).
2. Na horizontální vzpěru (2) nasuňte plastovou koncovku (15).
3. Upínku(6) nasuňte do větší díry držáku upínky (5) a jemně utáhněte šroubem (7) s podložkou (8).
4. Zkompleťovanou upínací sadu připevněte pomocí šroubu (9) s podložkou (8) do nosiče. Toto proveďte s oběma konzolami (5). V tomto okamžiku šrouby plně neutahujte.

KROK 2. PŘIPEVNĚNÍ NOSIČE NA KOLO

1. Postavte kolo do stojanu na rovnou plochu, nasadte nosič na kolo a zkontrolujte výšku.
2. Pokud je přednastavená výška nevyhovující, upravte ji nastavením výšky držáku nastavení výšky (3). Stranovým klíčem 10 mm podržte matici (13) a šestihranným klíčem 5 mm povolte šroub (12). Vysuňte držák (3) ze šroubu (12), nastavte jeho výšku přesunutím šroubu (12) do jiné díry v držáku a opět pevně utáhněte šroub (12) s maticí (13).
3. Nasadte nosič na kolo, šrouby (14) s podložkami (11) prostrčte držákem (3) a šestihranným klíčem 4 mm přitáhněte k závitům v rámu kola. V případě potřeby šroub nahraďte jiným, který bude lépe pasovat do závitů v rámu.
4. Vyrovnajte nosič do vodorovné polohy a šrouby (14) utáhněte.
5. Pomocí šroubu držáku upínky (9) nastavte šířku horizontálních vzpěr (2) a pomocí šroubu (7) nastavte délku a sklon horizontálních vzpěr (2) a horizontální vzpěry pomocí šroubů (10) přitáhněte horizontální vzpěry (2) k rámu.
6. Pokud jsou všechny upevňovací komponenty ve správné pozici a horní plocha nosiče je vodorovná, utáhněte pevně všechny šroubové spoje.

POZOR! Pravidelně kontrolujte utažení všech šroubových spojů a stav nosiče.

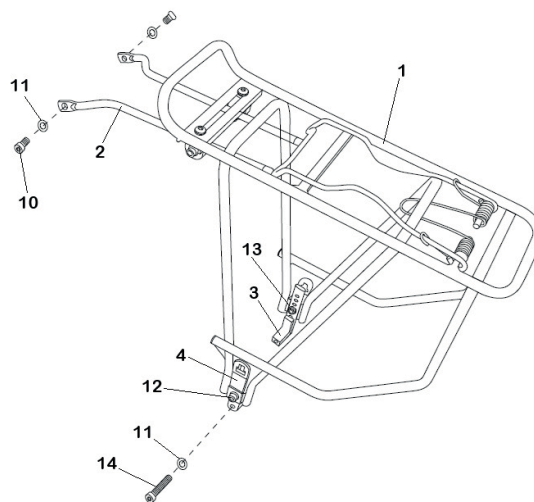

PARTS LIST

- 1/ carrier
- 2/ stay bar
- 3/ height adjusting console
- 4/ fastening eye
- 5/ adjustor console
- 6/ adjustor
- 7/ screw M6 x 12 - 2x
- 8/ washer M6 - 4x
- 9/ screw II M6 x 12 - 2x
- 10/ screw M5 x 12 - 2x
- 11/ washer M5 - 4x
- 12/ screw M6 x 16 - 2x
- 13/ nut M6 - 2x
- 14/ screw M5 x 40 - 2x
- 15/ plastic end cap - 2x

STEP 1. ASSEMBLING FITTING SET

1. Insert the stay bar (2) into the adjustor (6).
2. Cover the stay bar end (2) by plastic end cap (15).
3. Slide the adjustor (6) into the larger hole in the adjustor console (5) and gently tighten with the screw (7) and washer(8).
4. Secure the assembled fitting set to the carrier using screw (9) and washer (8). Do this with both adjustor consoles (5). Do not tighten the screws fully at this point.

STEP 2. ATTACHING THE CARRIER TO THE BIKE

1. Place the bike in the stand on a flat surface, place the carrier on the bike, and check the height.
2. If the preset height is not suitable, adjust it by adjusting the height of the height adjusting console (3). Hold the nut (13) with a 10 mm spanner and loosen the screw (12) with a 5 mm hex wrench. Slide the console (3) off the screw (12), adjust its height by moving the screw (12) to another hole in the bracket, and tighten the screw (12) with the nut (13) again.
3. Place the carrier on the bike, insert the screws (14) with washers (11) through the console (3) and tighten them to the thread in the bike frame using a 4 mm hex key. If necessary, replace the screw with another one that fits better into the thread in the frame.
4. Level the carrier to a horizontal position and tighten the screws (14).
5. Use the adjustor console screw (9) to adjust the width of the stay bars (2) and use the screw (7) to adjust the length and angle of the stay bars (2). Use the screws (10) to attach the stay bars (2) to the frame.
6. If all fastening components are in the correct position and the upper surface of the carrier is horizontal, tighten all screw connections securely.

CAUTION! Regularly check the tightness of all screw connections and the condition of the carrier.

