

CZ

NOSIČ FORCE 26"-29" ZADNÍ BEZ Klapáku AL, ČERNÝ

nosič bez pružinového klapáku
průměr trubičky: 10 mm
pro kola 26" - 29", pro kotoučové brzdy
lze dokoupit originální upínací gumu art. 22345
materiál: hliník
nosnost: 25 kg
hmotnost: 605 g

Seznam dílů:

- | | |
|------------------------|------------------------------|
| 1/ Horizontální vzpěra | 6/ Šroub M5 x 12 mm 4ks |
| 2/ Upínka | 7/ Podložka 6ks |
| 3/ Horní svorka | 8/ Nastavovací posuvná deska |
| 4/ Spodní svorka | 9/ Šrouby M5 x 35 mm 2ks |
| 5/ Plastová koncovka | 10/ Distanční trubičky |


EN

CARRIER FORCE 26"-29" REAR WITHOUT SPRING AL, BLACK

carier without spring holder
diameter of the tube: 10 mm
universal size: for 26" - 29" wheels, designed for disc brakes
available to buy original rubber strap art. 22345
material: alloy
maximum load: 25 kg
weight: 605 g

Parts List:

- | | |
|--------------------|--------------------------|
| 1/ Stay Bar | 6/ M5 x 12mm Bolts 4x |
| 2/ Stay Adjustor | 7/ Washers x 6 |
| 3/ Upper Clamp | 8/ Adjusting slide plate |
| 4/ Lower Clamp | 9/ M5 x 35mm Bolts 2x |
| 5/ Plastic End-Cap | 10/ Alloy tubes |

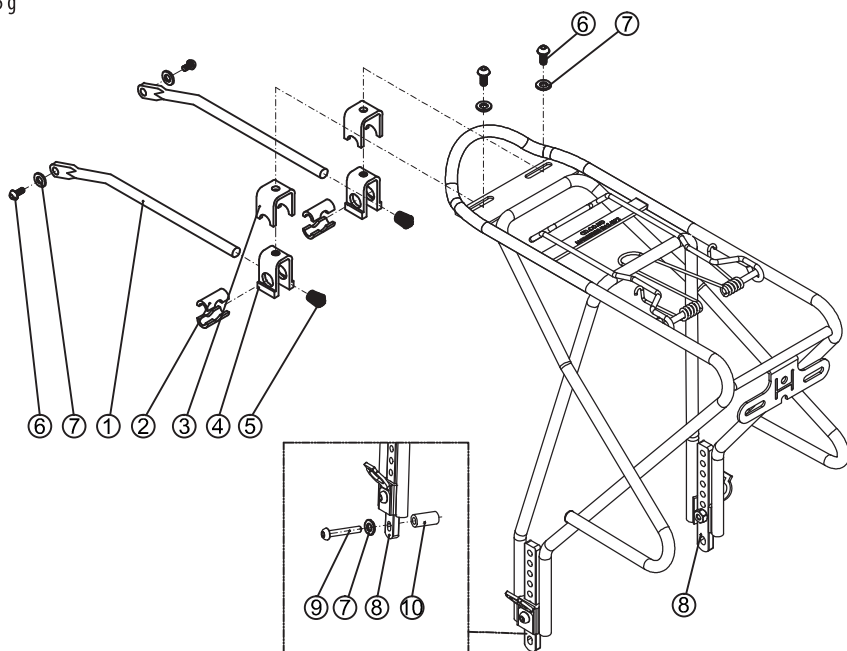

obr. 1 / fig.1

CZ

KROK 1. Sestavení upínací sady

1. Do spodní svorky (4) vložte 2 upínky (2).
2. Vložte horizontální vzpěru (1) do upínek (2).
3. Zakryjte konec horizontální vzpěry plastovou koncovkou (5).
4. Nasaďte horní svorku (3) na spodní svorku (4).
5. Připevněte upínací sady k nosiči pomocí šroubů (6) a podložek (7). V tomto kroku šrouby plně neutahujte.

KROK 2. Připevnění nosiče na kolo

Podržte nosič na kole a zkontrolujte správnou výšku pro nastavení posuvné desky (8). Po nalezení správné výšky, nasuňte podložku (7) na šroub (9) a zašroubujte je přes posuvnou desku (8) a distanční trubičku (10) (obr.1) do oka na rámu.

KROK 3. Montáž upínací sady na kolo

1. Nastavte polohu upínací sady (vzpěry lze nastavit do různých úhlů, směrů a délek) a pomocí šroubů (6) a podložek (7) ji připevněte na oka sedlové vzpěry rámu.
2. Po nalezení vhodné polohy utáhněte šrouby montážní sady (6), šrouby horizontální vzpěry (6) na sedlové vzpěře rámu a šrouby posuvné desky (9) v okách rámu.

Pozor:

Průběžně kontrolujte, zda jsou všechny šrouby dotaženy.

EN

STEP 1. Assembling fitting set

1. Insert 2 Stay Adjustors (2) into Lower Clamp (4).
2. Insert Stay bar (1) into Stay Adjustor (2).
3. Cover stay bar end by Plastic End-Cap (5).
4. Put Upper Clamp (3) on Lower Clamp (4).
5. Mount the fitting sets to carrier by bolts (6) and washers (7). Do not fully tighten the bolts at this step.

STEP 2. Attach carrier on the bike

Hold the carrier on the bike and check the proper height to adjust the slide plate (8). After finding the suitable position, screw the bolts (9) and washers (7) through the slide plate (8) and alloy tubes (10) (fig.1) on the bike frame dropouts' eyelets.

STEP 3. Mounting fitting set on the bike

1. Adjust fitting set position (the stays can be adjusted to different angles, directions and extension length) and use bolts (6) and washers (7) to mount on seat stay eyelets.
2. After finding the suitable position, tighten the fitting clamp bolts (6), stay bar bolts (6) on seat stay and the slide plate bolts (9) on dropouts eyelets securely.

Attention:

Continually check all bolts are fastened.



FORCE.BIKE